PROSKIRTING CHANNEL is the new innovative skirting designed with an integrated system for plasterboard walls, and devised to create a skirting flush to the wall with decorative inner grooves for a modern and contemporary touch.

PROSKIRTING CHANNEL

ANODISED, BRUSHED, VARNISHED ALUMINIUM



EXAMPLES OF LAYING for instructions see the product below

- PLASTERBOARD

SUPPORT/ PERFORATED BASE - ANODISED SILVER ALUM. thermo packed - har length 2 lm - pack 20 Pcs - 40 lm

Article	H mm	
PKGCFAA 75	75	

ORDER THE SUPPORT AND THE TOP YOU WISH


VISIBLE TOP - ANODISED, BRUSHED, WHITE VARNISHED ALUM. thermo packed bar length 2 lm - pack. 20 Pcs - 40 lm

Article	H mm		
PKCHAA 55	55		
PKCHBS 55	55		
PKCHA 55-01	55	,	k

ON DEMAND MAY BE REALISED IN OTHER FINISHES OF THE COLOUR CHART. CONTACT OUR CUSTOMER SERVICE FOR MINIMUM QUANTITY, TIMING AND PRICE.

INTERNAL CORNER - ANODISED, BRUSHED, WHITE VARNISHED ALUM. - pack. 5 Pcs Article H mm REPKCH... 55 55 REPKCHA 55-01 55

Available in the colours: AA - BS - 01. The code of the selected colour must be added to the article code. E.g.: REPKCH... 55 (chosen finish anodised silver) REPKCHAA 55

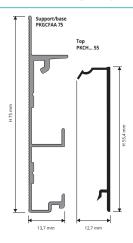

PROSKIRTING FLAT is the new innovative skirting designed with an integrated system for plasterboard walls, and devised to create a skirting flush to the wall for a modern and contemporary touch.

PROSKIRTING

ANODISED, BRUSHED, VARNISHED ALUMINIUM



SUPPORT/ PERFORATED BASE - ANODISED SILVER ALUM. thermo packed - bar length 2 lm - pack. 20 Pcs - 40 lm

Article	H mm		
PKGCFAA 75	75		
ORDER THE S	SUPPORT AND	THE TOP YOU	WISH

VISIBLE TOP - ANODISED, BRUSHED, WHITE VARNISHED ALUM.

thermo packed - bar length 2 lm - pack. 20 Pcs - 40 lm

Article	H mm	
PKFLAA 60	60	
PKFLBS 60	60	
PKFLA 60-01	60	*

ON DEMAND MAY BE REALISED IN OTHER FINISHES OF THE COLOUR CHART.
CONTACT OUR CUSTOMER SERVICE FOR MINIMUM


QUANTITY, TIMING AND PRICE.



EXTERNAL CORNER - ANODISED, BRUSHED, WHITE VARNISHED ALUM. - nack 5 Pcs


Page 115			
Article	H mm		
REPKFL 60	60		
REPKFLA 60-01	60		

Available in the colours: AA - BS - 01. The code of the REPKFLAA 60.

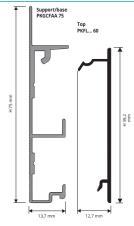



EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

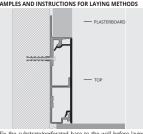

1. Fix the substrate/perforated base to the wall before laying the 1. Fix the substrate/perforated base to the wall before laying the plasterboard, calculating all the heights and distances. 2. Lay the plasterboard aligning the lower part flush to the "PROSIGRING CHANNEL" and/or PLAT. 3. Plaster and carry out the surface finishing on the plasterboard. 4. Choose the required Top "PROSIGRING CHANNEL" and/or PLAT finish, cut and lay the profile fitting the lower part and then the upper part by pressing gently.

Proskirting. They must be protected against agents such as adhesives and sealants and against grinding or scraping actions.